


Menu

For descriptions of all functions: see User Manual, 9d24 Cordless Telephone.

Menu tabs

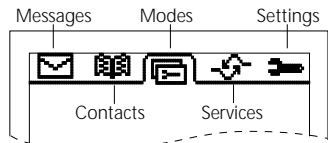

Navigate in the menu

Enter the menu mode by pressing the Menu key; last used tab is marked. Use Navigation key (←) to choose tab and press Navigation key (↵) to open it; a heading is shown and the first alternative is marked. Use Navigation key (→) to step in the alternatives and select one by pressing Navigation key (↵). Navigation key (←) always takes you back one step.

The three Soft keys below the display are used for choices in the menu. The function of each Soft key is explained by text in the soft key field in the display. In menu mode press the Menu key to return to standby mode.

Use the *-key to switch between capital and small letters when entering text, and move to the next row by pressing the Navigation key (↵).

Alternate Modes

Enter "Modes", step to desired mode and press "Select".

Find and edit a name in the Local phonebook

Enter "Contacts", step to "Local phonebook" and press "Find". Enter the first letter in the name or the whole name. Press "Search"; name and number in the first matching entry is shown. You can step to the next entry in alphabetic order by pressing Navigation key (↵). Press "Edit", make your changes and press "Save".

Add an entry in the Local phonebook

Enter "Contacts", step to "Local phonebook" and press (↵). Press "Add", enter name and number and press "Save".

Delete an entry from the Local phonebook

Find and select desired entry, see *Find and edit a name in the Local phonebook*. Press "Delete"; the question "Delete entry?", is shown. Press "Yes".

Edit a Hot key or Soft key

Enter "Settings", step to "Hot key" or "Soft key", and press (↵). Step to a key position and press (↵); the name and function is shown. Press "Edit". Enter a new name/description and press "Save". Mark the function and press (↵). Select a new function and press "Select". Make your settings and press "Save".

Turn the automatic keypad lock on/off

Enter "Settings", step to "General" and press (↵). Select "Auto key lock, press "Change"; the Auto lock checkbox is marked/unmarked. A locked keypad is indicated by the "Locked keypad" icon.

Switch the telephone off/on

Off: Enter "Modes". Step to "Switch off" and press "Select".
On: press and hold the Call key; the question "Switch on?" will be displayed. Press "Yes" within 2 seconds.

Alarm functions (9d24 Protector versions only)

Personal alarm*

Press the red Alarm button twice within 2 seconds. "Personal alarm" is displayed.

Test alarm*

Press and hold the red Alarm button until "Test alarm" is displayed.

**Dependent of installation*

Deactivate/Activate Alarms

Enter "Settings", step to "Alarm settings" and press (↵). Select "No-movement", "Man-down", or "Pull-cord", press "Change"; the checkbox is unmarked/checked. Hot keys/Soft keys can also be reserved for deactivation/activation of alarms.

Warning: Ear-cap region is magnetic and may retain some metallic objects

Accessories

The following accessories for the 9d24 are available:



Leather casing incl. Belt clip

Belt clip, swivel type

Standard clip

Desktop charger

Headset with hearing protection *

Headset with microphone on boom *

* Headset connector needed on the telephone.

Also available:

- Security string
- Headset with microphone integrated in cable *
- Adapter for standard Peltor headsets*
- Charging Rack

Distributed by:

Ascom Nira Pty Ltd

Unit A, 10-20 McEvoy Street
Waterloo NSW 2017 Australia

P (02) 9698 9000 F (020 02 9698 2749

www.ascom.com.au


Manufactured by:

Ascom Tateco AB, Sweden

M0263330 Rev C February 2003 Ascom Tateco AB

Quick Reference Guide, GB
Ascom 9d24
Cordless telephone

ascom

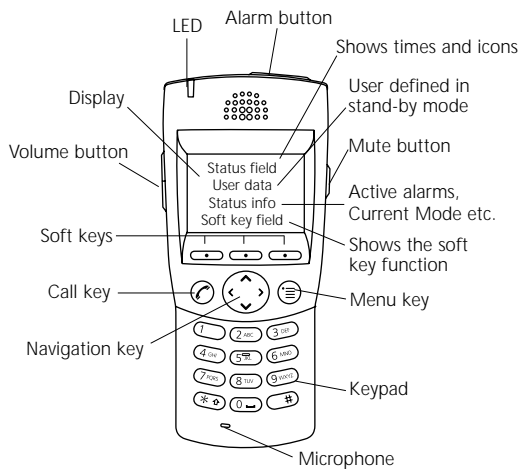

Icons in the display

- Hook off (shows a call in progress)
- Audio signals off
- Battery icon
- Loudspeaking function on/off
- Headset connected
- New message
- Text input mode; capital letters
- Text input mode; small letters
- Digit input mode
- Phonebook
- Locked keypad
- Not answered call
- Incoming/Outgoing call
- Unread/Read message
- Unread/Read interactive message
- No-movement/Man-down alarm on
- Pull-cord alarm on

Product presentation

The Ascom 9d24 cordless telephones are robust units designed to function in tough environments. The telephones are suitable for users dependent on being reachable and/or having a need for mobile advanced messaging functions. The telephone is available as 9d24 Messenger with messaging functions, and 9d24 Protector equipped with additional alarm functions. The 9d24 Messenger and 9d24 Protector are also available in the Medic colour.

Functions

	Messenger	Protector
SIM card with phonebook	X	X
Up to six lines in display	X	X
Adjustable character size in messages	X	X
20 messages /20 000 characters	X	X
Vibrator	X	X
Headset connector	X*	X*
Loudspeaking	X	X
Acknowledge	X	X
Interactive messaging	X	X
SMS - messaging between handsets	X	X
Data send	X	X
Personal alarm	-	X
Alarm with data	-	X
Pull-cord alarm	-	X*
Location	-	X
Man-down & No-movement alarm	-	X*

* Option, only when ordering

Note: Your unit may have more functions than described here; see *User Manual, 9d24 Cordless Telephone*.

Basic functions

Make a call

Dialling can be made in the following ways:

- Dial the number and press the Call key.
- Press the Call key and dial the number.
- Press a pre-programmed Hot key* or Soft key.
- Open the call list by pressing Navigation key (↶), select the number you want and press the Call key.
- Dial a number from the local phonebook. When the name is shown; press the Call key.
- Dial a number included in a message, see *Dial a number included in a message*.

* The alpha-numeric keys can be programmed with a telephone number.

Answer/End a call

When the ring signal sounds; press the Call key to answer. To end the call, just press the Call key again. The total call time is shown in the display.

Turn loudspeaking function on/off

During a call, press the middle soft key to turn on/off the loudspeaking function.

Turn audio signals on/off

In stand-by mode a long press on the Mute button changes between audio signals on/off. The "Audio signals off" icon indicates a completely silenced telephone.

A short press on the Mute button before answering a call, silences the ring signal.

Turn the mute mode during a call on/off

A press on the Mute button disconnects/connects the microphone. The text "Muted" is shown in the display when the microphone is off.

Lock/Unlock the keypad manually

Press the Menu key and then the ^-key to lock/unlock. The "Locked keypad" icon indicates a locked keypad.

Change the volume during a call

Press the Volume button upwards to increase the volume, downwards to decrease the volume.

Charge the battery

Charging is done in a desktop charger or a wall mounted charging rack. A filled "Battery icon" indicates a fully charged battery. While in a desktop charger the telephone is fully operational.

Messaging functions

Receive a text message

When a text message is received, the LED starts flashing and a message tone sounds. If the message is received during a call, the user is notified by a beep. The text message is displayed and then stored in the message list. The "New message" icon is shown in the display and a number next to the icon indicates the total number of unread messages. To accept messages with request for answer; see *User Manual, 9d24 Cordless Telephone*.

Read a stored message

Open the message list, either from the menu or by pressing Navigation key (↶). Use Navigation key (↷) to navigate in the message list. Press Navigation key (↶) to read.

Delete a stored message

Open the message list with Navigation key (↶) and use the same key (↷) to select the message. Press "Delete"; the question "Delete message?" is shown. Press "Yes".

Dial a number included in a message

Open the message list by pressing Navigation key (↶), select a message and press the Call key. The first number in the message will be dialled. To dial a number included in an interactive message, for example, the central directory, open the message and select the number, then press the Call key.